

SAILOR Fleet One

Quick Guide

Make a voice call

To make a call from the terminal, dial
00 <country code> <phone number>

Example: Cobham SATCOM in Denmark:
00 45 39558800

Note: If you are using an analogue phone, dial #
 after the number to activate the call.

Example: Cobham SATCOM in Denmark:
00 45 39558800 #



To make a call **to** your SAILOR Fleet One terminal, dial

+<Fleet One number>

Example: **+870 772420567**

Access the Internet

To access the Internet from a connected computer or wireless device, first start a data connection. Do as follows:

1. On the connected device, open your Internet browser.
2. Enter the IP address of your SAILOR Fleet One terminal. The default IP address is **192.168.0.1**.
3. The built-in web interface of your SAILOR Fleet One terminal opens.
 With the web interface you can set up and control the SAILOR Fleet One and see status.
4. At the top of the page, click the button **Start data connection**.

You should now have access to the Internet.

Note: Using the web interface you can set up the terminal to automatically start a data connection at startup. See the SAILOR Fleet One User & installation manual for details.

Use of WLAN

The SAILOR Fleet One does not include built-in WLAN.

You can connect an external WLAN access point to one of the LAN connectors of the terminal. Using this access point, you can access the Internet or make calls over the satellite network with your WLAN enabled device.

Note: To make calls via WLAN you must install a SIP client (or SIP app) on your smartphone and enter the following details to connect your phone to the SIP server of the Fleet One:

- SIP server address and port:
 Default address: 192.168.0.1, Port: 5060
- User name:
 Local no. in Fleet One (0501 to 0504)
- Password:
 Default same as user name
- Codec priority:
 Highest priority codec type: G.711

In the web interface of the SAILOR Fleet One, select **SETTINGS > IP handsets** and set up the user name (Number) and password to match the user name and password in your phone.

For further information, refer to the SAILOR Fleet One User & installation manual.